

Seycove Diamond - Score Board Remote Instructions

Remote

- Get the remote control from the back of the scoreboard

Game Scoring

- Use the scoreboard remote to enter:
 - Balls (button: BALL)
 - Strikes (button: STRIKE)
 - Outs (button: OUT)
 - Runs for home (button: HOME)
 - Runs for guest (button: GUEST)
 - Current inning (button: INNING)
- To reset any item press button: CLR ITEM followed by the button for the item you wish to clear (i.e. CLR ITEM - BALL will remove all balls from the scoreboard)
- There is no minus function for balls, strikes or outs (if you make a mistake continue tapping balls/strikes/outs as this will reset when it reaches the maximum)

After the Game

- Press the button: PWR OFF on the remote to turn the scoreboard off
- Please ensure the remote is re-attached to the back of the scoreboard

